


THINRIBBON

ASSEMBLY INSTRUCTIONS
2025 02 11

WALLRIBBON

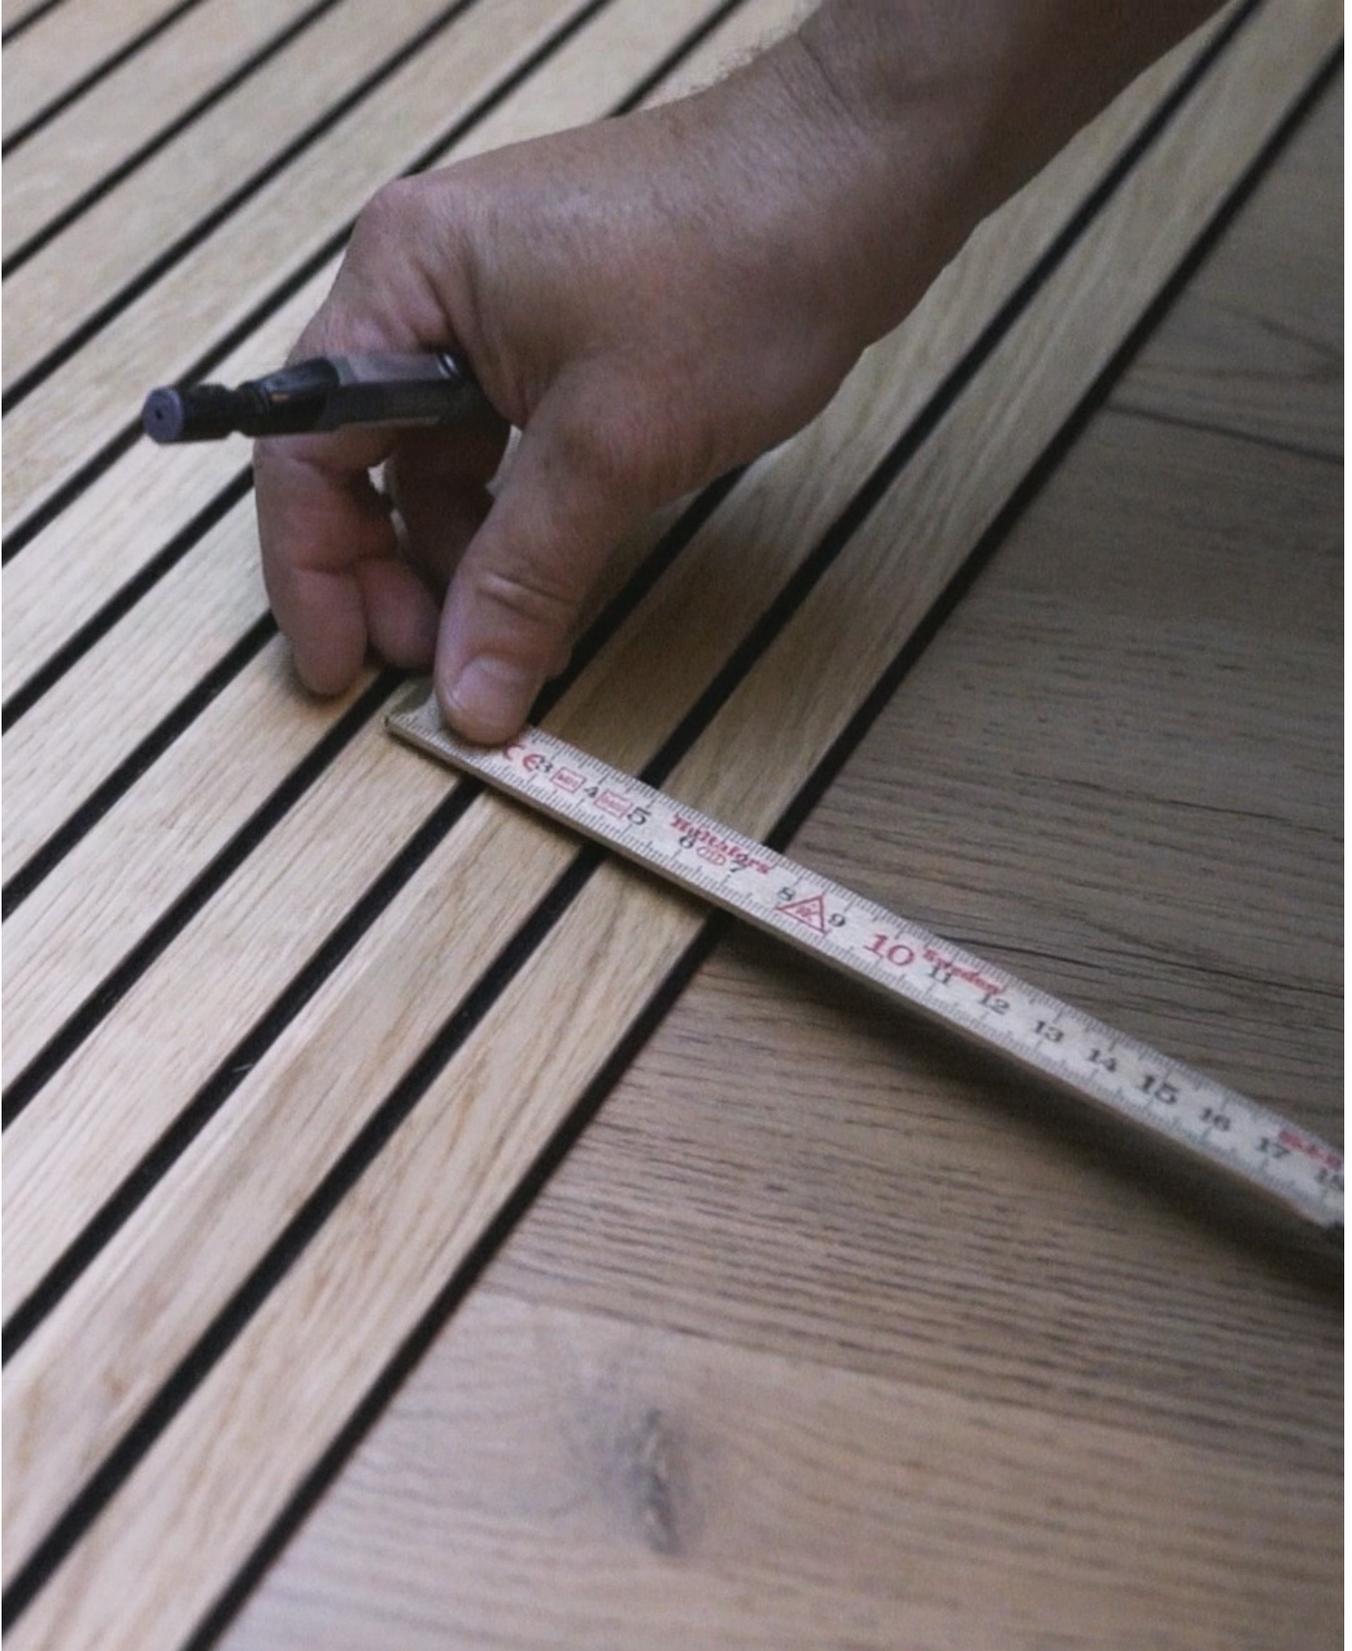

CONTENTS

Tools & Accessories	3
Installation method with ThinRibbon assembly glue	6
Installing outer corners	9

TOOLS NEEDED



Nail gun



Spirit level



Glue



Carpet knife



Tape measure



Ruler

OTHER ACCESSORIES




Staples




Knife blade

Accessories for installing our wall panels.

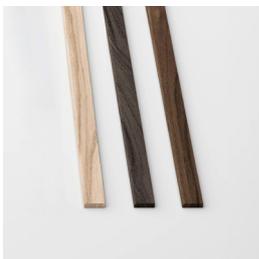



Finishing strip
23mm

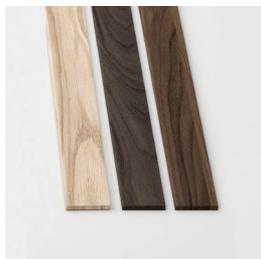

Finishing strip
48mm




Installing ThinRibbon is easy. Glue with our ThinRibbon glue to get the best attachment properties on the walls. It is important to check the flatness of the existing wall and that they are plumb so that it is straight, also measure the height of the wall.

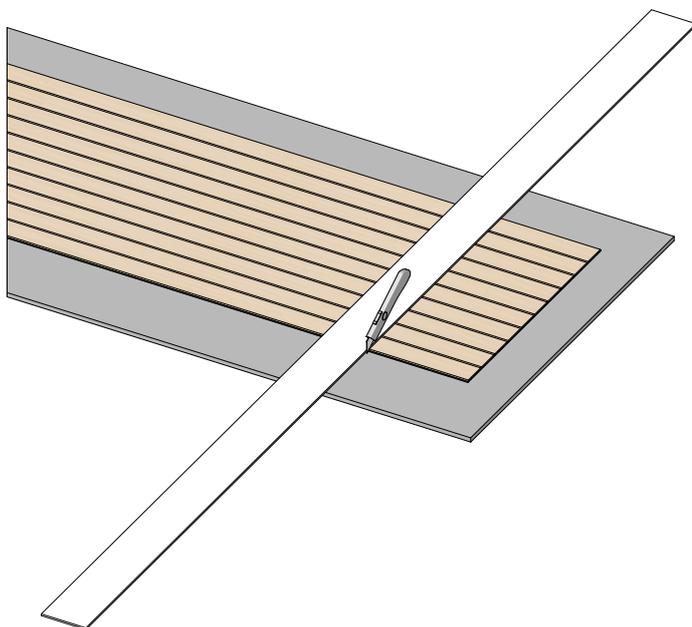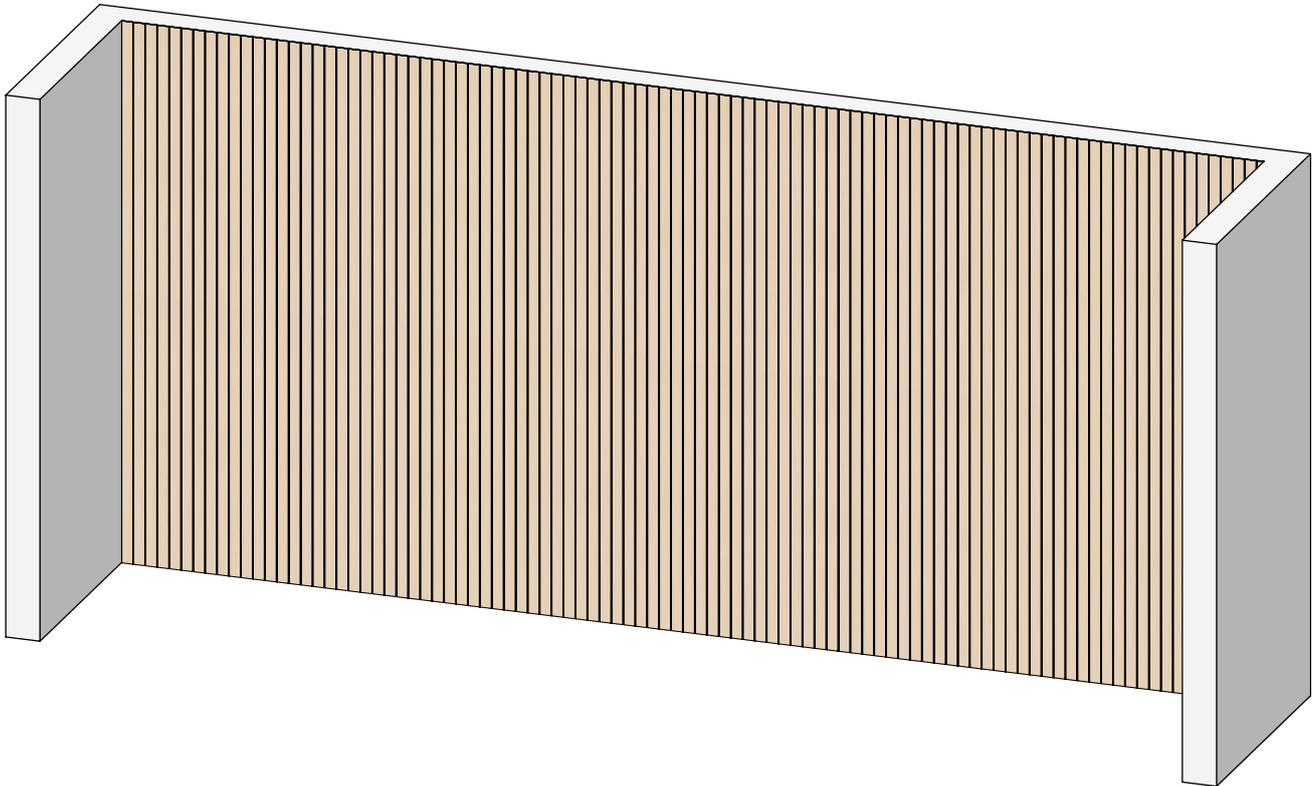

1


If the panels need to be cut at the height, use the ThinRibbon knife with our ruler. To cut through the entire thickness of the panel, cut repeatedly in the same groove. Change the blade often.

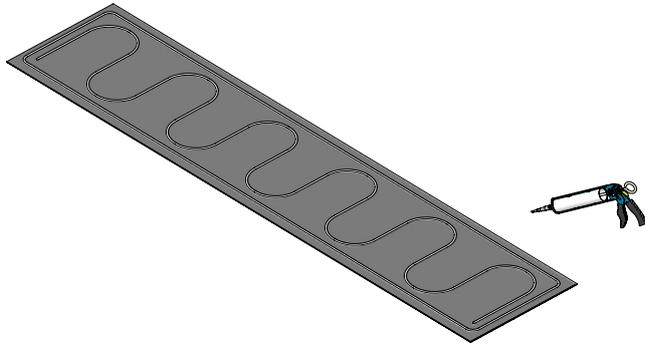

2


Installation method with ThinRibbon assembly glue.

Glue the panels with ThinRibbon mounting glue. One tube of mounting glue is enough for about 2.5 panels.

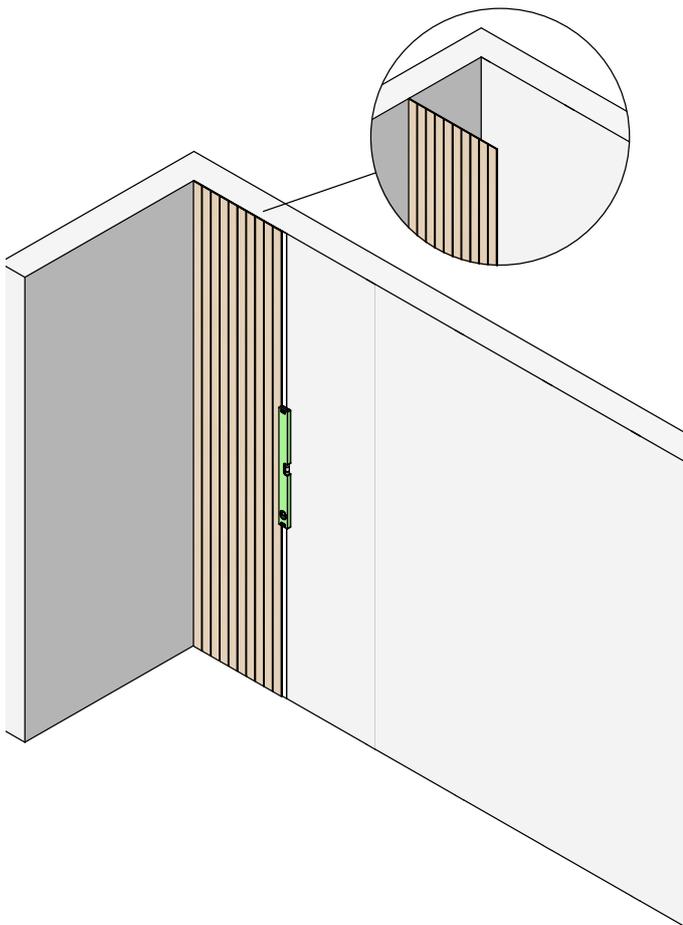

3

Press the first panel into place and press with your hands so that the glue sticks to the existing wall. Make sure the first panel is straight.

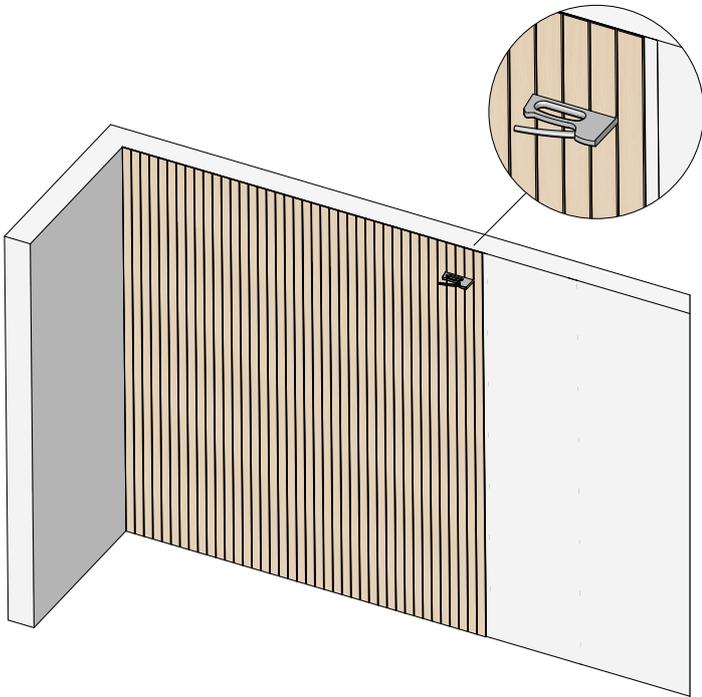


4

If necessary, use the ThinRibbon stapler and put some staples in the black grooves so the panel stays in place during assembly. Repeat this pattern.

Staple quantity:


2400mm = 15 pcs/panel, three in the middle, three at the bottom and three at the top.

2960mm = 18 pcs/panel, three at the bottom, three at the top and six evenly distributed in the centre with three per row.

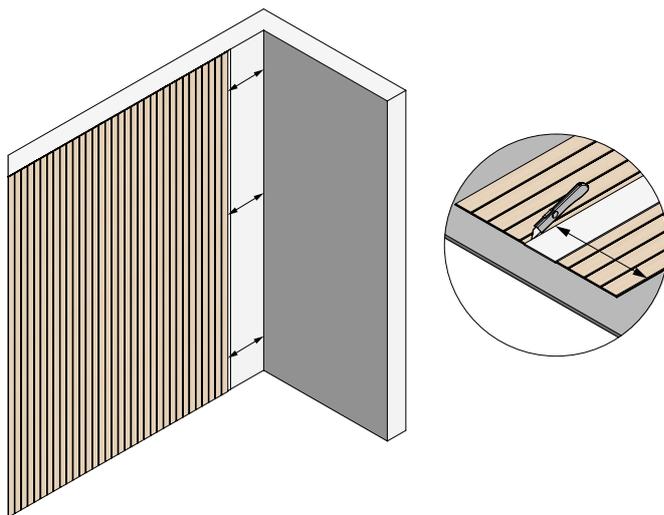


5

Before the last piece, measure the width between the panel and the wall in at least three different places to make sure the panel fits. Use the ThinRibbon ruler to draw a straight line and as a support when cutting the panel with our knife. Cut repeatedly times to achieve a neat cut.

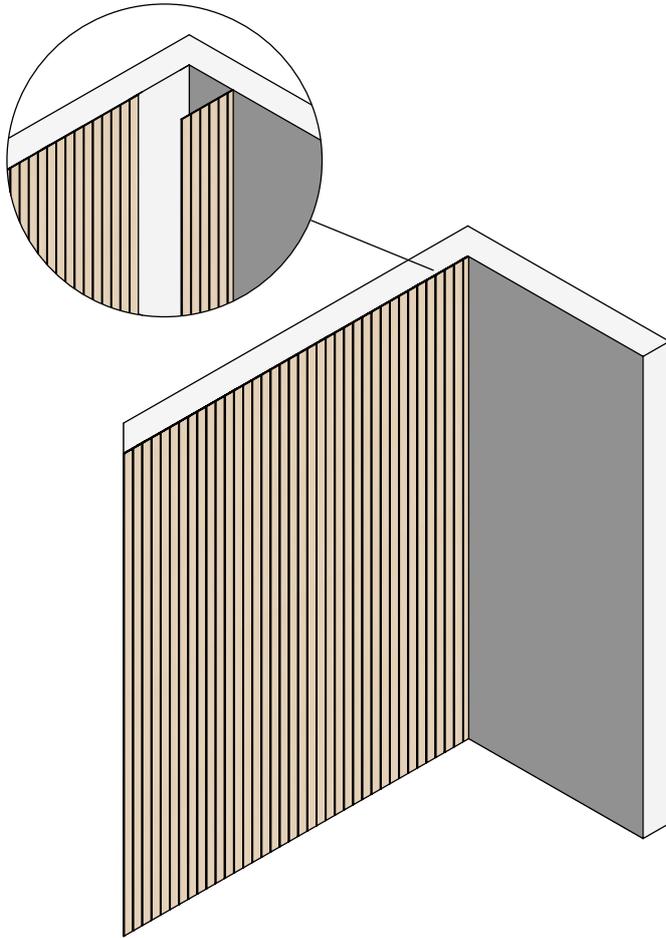


6

Press the last piece in place and press the whole panel so that the glue sticks between the panel and the wall.

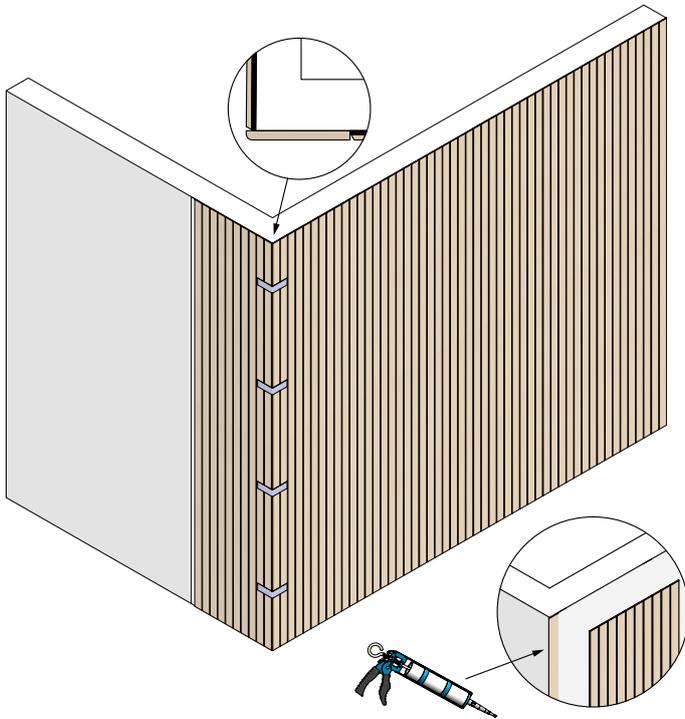

Installing outer corners

Use our finishing strip when installing an outer corner. Check that you cross over with our finishing strip enough to cover the panel on the other side, about 6mm. Glue with Thin Ribbon assembly glue on the finishing strip and press it in place. Then continue to mount the next panel. Next, tape it to our panels and let the glue set.

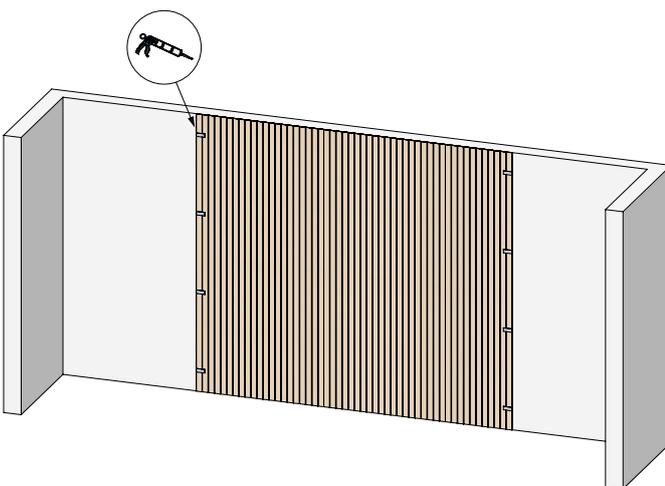

Installation of the finishing strip

Use ThinRibbon assembly glue to attach our finishing strips. Glue liberally on our finishing strip and wipe off excess. Once in place, tape it to our panels and let the glue set.

WALLRIBBON AB

Sture Steens Väg 9 | 341 55 Vittaryd

Tlf.Nr: +46 44 454 01

E-Mail: info@wallribbon.com

Website: www.wallribbon.com